

**Part Number:** BMW-F8ST-7-CDS

**Description:** Canyon Dual Sport Saddle

**Fitment:** 2007 BMW F800 ST

**Revision:** 1



Tools Required	Parts List
None	Canyon Dual Sport Saddle

1. Remove your stock seat. Refer to your owner's manual if necessary.
2. Saddle mounts just like stock with brackets preinstalled on the saddle.
3. To install your Canyon Dual Sport saddle, slip the front bracket of your saddle under the bracket at the rear of the gas tank, align the rear corbin bracket to the stock locking mechanism and push down on the saddle until you hear the lock click. (Figure 1)

**NOTE:** If you will be using the rider's backrest, install it before latching seat to bike. There is a safety screw that must be installed and you cannot reach it with the seat mounted on.



FIG 1

4. To install the optional backrest, you will need to slide the backrest shaft through the opening on the top seat cover, then secure it into place, through the bottom with the supplied Allen screw, using a 3/16" Allen key (Figure 2).
5. To remove the saddle, use your stock key at the rear of the bike.

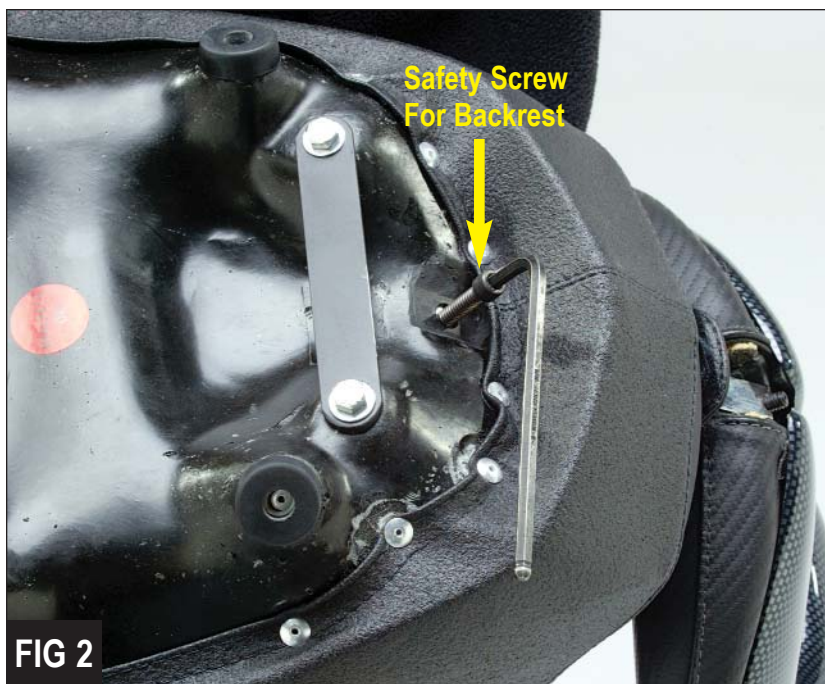


FIG 2

Questions? Give us a holler...  
**800-223-4332**  
**tech@corbin.com**