

**Part Number:** D-SF-V4

**Description:** Gunfighter Saddle

**Fitment:** 2021 Ducati 954 Streetfighter V4

**Revision:** 3



Tools Required	Parts List
3mm Allen Wrench 4mm Allen Wrench	1 #A01325 Bracket Lock Kit 2 #SP02567 m5 x m30 Button Head Allen Bolts 2 #SP00793 Small Flat Washers 2 8" zip tie


1. Remove your stock rear seat using the OEM key. Remove the stock front seat by removing two bolts, using a 4mm Allen wrench (*Figure 1*).



2. Next, you will need to remove the tail panel. Start by removing the two lower bolts on each side, using a 3mm Allen wrench (*Figure 2*). Then remove the two bolts on top (*Figure 3*). Discard the two top bolts or put them in a safe place. You will not be reusing them with the Corbin saddle. Remove the tail panel (*Figure 4*).



3. Remove the two bolts on the right side panel, using a 4mm Allen wrench (*Figure 5*). Gently flex back the panel to gain access to the key lock cable end.

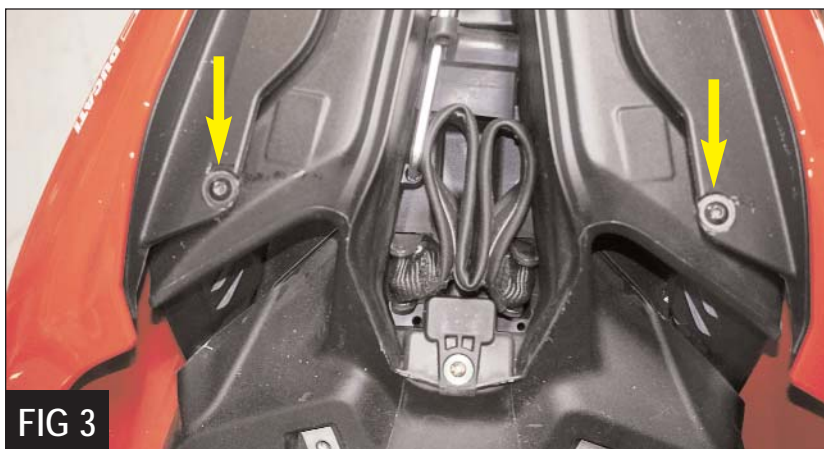

4. Locate the locking mechanism on the right side of the bike and disconnect the cable and push it out of the way (*Figure 6*).

**NOTE:** Does not need to be removed from the bike.

5. Route the Corbin cable towards the right side of the the frame (*Figure 7*) and connect it to the OEM locking mechanism where you just disconnected the cable in step 4 (*Figure 8*).



6. Reinstall right side cover.



7. Slide the tail panel back into place, making sure the rear tab on the bike slides into the rear of the tail panel (*Figure 9*).




8. Install the Corbin bracket on to the tail section and secure with the supplied m5 x m30 Allen bolts and flat washers, using a 3mm Allen wrench (*Figure 10*).

**NOTE:** We recommend placing a towel over your bike to help prevent from scratching.

9. Zip tie cable to the frame (*Figure 11*).

10. Reinstall the lower bolts onto the tail panel.

11. To install your Gunfighter saddle, slip the two front pegs in the front mounting points, align the Corbin locking pin to the Corbin locking mechanism and push down on the saddle until you hear the lock click (*Figure 12*).

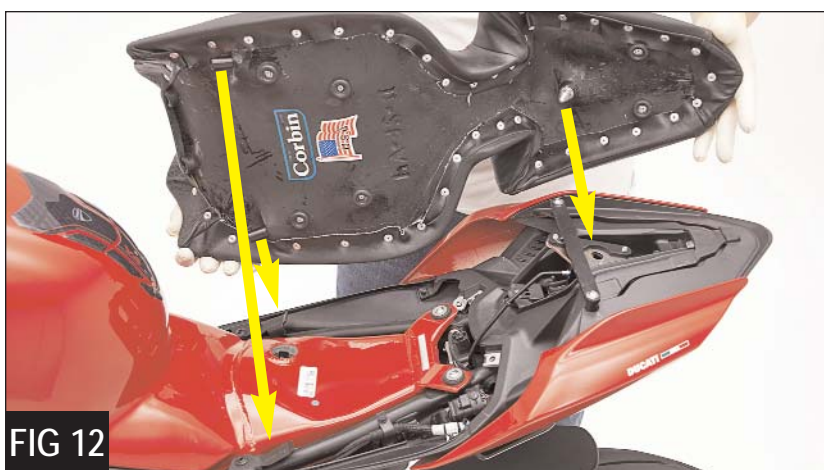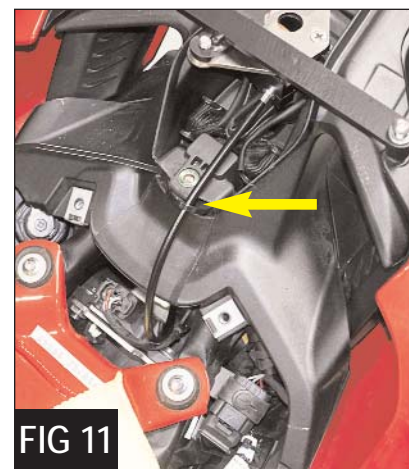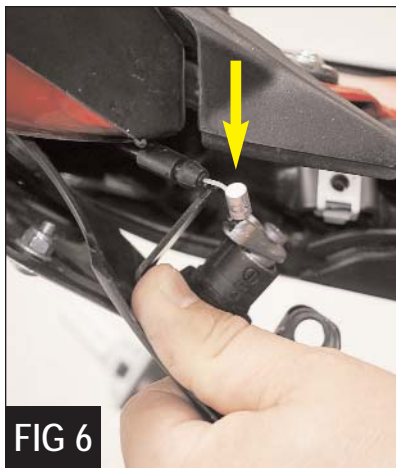

Questions? Give us a holler...  
**800-223-4332**  
[tech@corbin.com](mailto:tech@corbin.com)

# #D-SF-V4

## PUT ON seat

SP01080 m6 fender washer  
QTY ( 1 ) zinc finish



P00545 nylon cup washer  
QTY ( 1 ) black finish



SP11015 latch pin  
QTY ( 1 ) stainless



SP00119 1/4x20x1 1/4 cap head bolt  
QTY ( 2 ) black finish



SP00945 nylon spacer  
QTY ( 2 ) Black finish



## SEND w/ seat

A01325 bracket lock kit  
QTY ( 1 ) black brkt finish



SP00793 small washer  
QTY ( 2 ) zinc finish



SP02567 m5xm30 bton head allen bolts  
QTY ( 2 ) Black finish



8' zip ties  
QTY ( 2 ) black finish

