

Part Number: HD-XL-CU-4-S, HD-XL-CU-4-CS
HD-XL-CU-4-S-2 & HD-XL-CU-4-H



Description: Solo Saddles

Fitment: 2004-2006 Harley Davidson Sportster

Revision: 2

Tools Required	Parts List
7/16 Open Wrench	#A00516 Mounting Bracket 2 1/4" x 20 Nyloc Hex Nut 2 1/4" Washers


To install your new Corbin saddle, you'll first need to attach the seat mounting pin to the bike. This is achieved by slightly moving the ignition module forward with the provided bracket, allowing room for the seat-mounting pin.

NOTE: We highly recommend using a removable strength thread lock product, such as Loc-tite® on the nuts for added safety.

1. To reposition the ignition module, remove the two nuts from the threaded studs (*Figure 1*). Move the ignition module to the side and position the Corbin bracket over the threaded studs with the seat mounting pin oriented towards the rear of the motorcycle (*Figure 2*). Attach the bracket to the posts with the original nuts. This permits correct clearance after replacing the module - see step 2.

2. Place the ignition module over the studs on the supplied bracket and secure it with the provided washer and nut (*Figure 3*).

3. Now you're ready to install your saddle. Slip the front tongue into the slot by the gas tank, center the rear of the seat over the pin and press firmly down as the seat "clicks" into place. It is now mounted and locked to your motorcycle. To remove the saddle, use the key to unlock the rear and lift off.

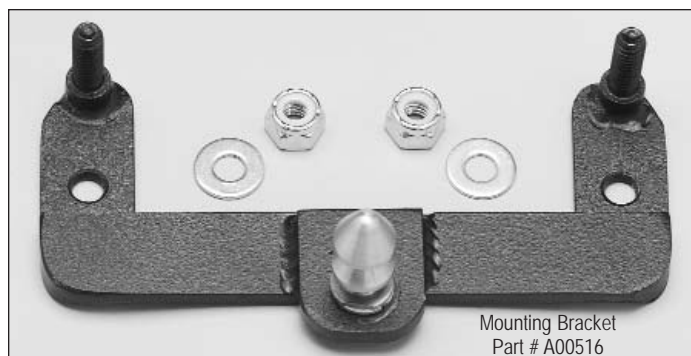

Questions? Give us a holler...
800-223-4332
tech@corbin.com