

Part Number: H-MKY-19
Description: Solo Saddle
Fitment: 2019 Honda Monkey
Revision: 1




Tools Required	Parts List
10mm Socket Wrench 12mm Socket Wrench	3 6mm x 25 Hex Head Bolts

1. Start by removing your stock seat. To do this, remove the two bolts from the chassis by using a 12mm socket wrench, disengage the rear tab, then pull out the seat. See owner's manual if necessary.

2. Remove the bracket from the stock seat and transfer it onto the Corbin seat and secure with the stock washers and provided hex head bolts, using a 10mm socket wrench (*Figure 1*).

3. Install the Corbin seat onto the chassis, just like stock (*Figure 2*) and secure with the stock bolts (*Figure 3*).

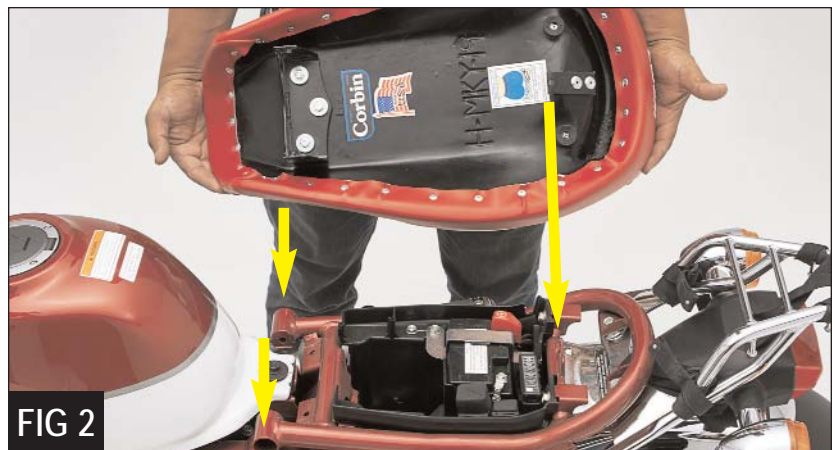

Questions? Give us a holler...
800-223-4332
tech@corbin.com