

Part Number: K-ZX14-6-PEG

Description: Peg Relocation Kit

Fitment: 2006 Kawasaki Ninja ZX14

Revision: 2



Tool Required	Parts List
5mm hex wrench 6mm hex wrench Torque wrench	1 #P10394 Left peg bracket 1 #P10393 Right peg bracket 4 m8 x 1.25 x 50 flat head screws 4 #P10389 spacers

NOTE: We highly recommend using a medium strength thread lock product, such as Loctite®, on all bolts.

1. Refer to figure one to select the correct bracket for right or left side. The holes marked "A" in figure one are counter sunk and NOT threaded.

2. On the left side, remove the two bolts holding the peg hanger to the chassis. Install the Corbin bracket as shown with a spacer between the bracket and chassis at location "A" in Figure 1.

3. Secure with the included bolts and tighten to 12 ft lbs. Use Loctite here!

4. Secure the peg hanger to the Corbin bracket using the stock bolts at location "B", Figure 1. Tighten to 12 ft lbs and use Loctite!

5. Repeat this procedure on the right side.

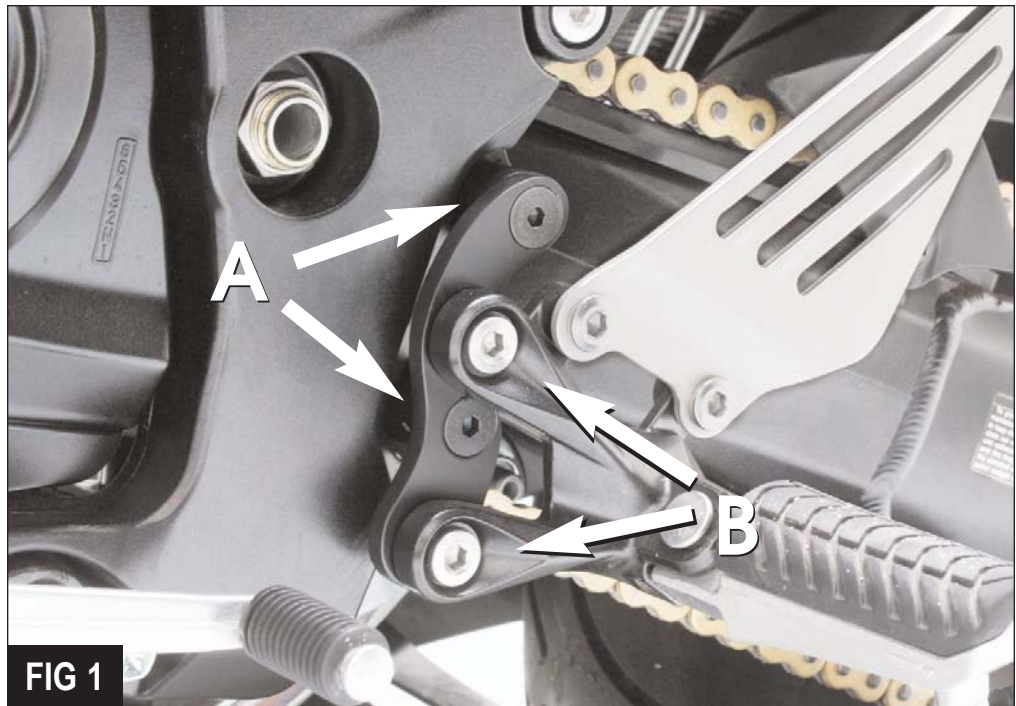


FIG 1

Questions? Give us a holler...
800-223-4332
tech@corbin.com