

Part Number: S-BURG-2

Description: Scooter Saddle

Fitment: 2014 Suzuki Burgman 200

Revision: 1



Tools Required	Parts List
10 mm socket wrench	3 6m x 20 Hex head bolts 3 6m Flat washers


NOTE: We highly recommend using a removable strength thread lock product such as Loctite® on the bolts when installing your saddle.

You can install this saddle alone, but to make it easier to manage, it would be helpful to enlist the help of a buddy to support the saddle during the installation.

1. Using a 10mm combination wrench, remove the screws on the front bracket. Pull out the seat and set aside.

2. Your new saddle is now ready to install onto your scooter. Using the provided 6m x 20 hex head bolts and flat washers, your Corbin saddle will attach to the hinged mounting bracket the same as the OEM seat (*Figure 1*). Secure tightly.

3. To latch the seat, firmly press the seat down over the latch to lock into place (*Figure 2*). Now you're ready to jump on and take it out for a test ride - ENJOY!!

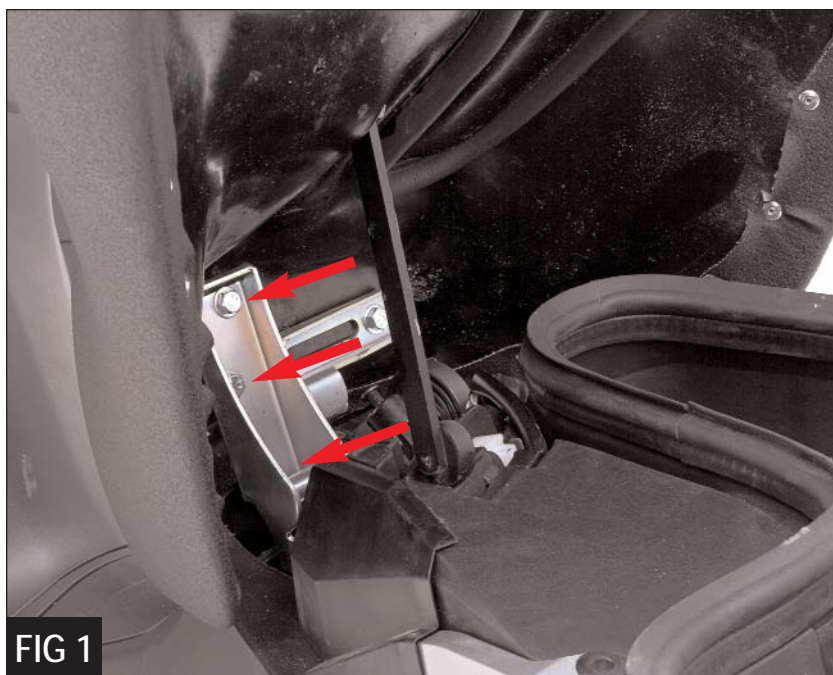

Questions? Give us a holler...
800-223-4332
tech@corbin.com