

**Part Number:** T-BON-BOB-S  
**Description:** Bobber Saddle  
**Fitment:** 2018 Triumph Bobber  
**Revision:** 1



Tools Required	Parts List
17mm Combination or Socket wrench 3mm Allen wrench 3/32 Allen wrench T50 Torx wrench T15 Torx wrench	7 8/32 Allen bolts


1. Start by removing your stock seat. To do this, remove the three bolts from the chassis by using a T50 torx wrench, then pull out the seat (*Figure 1*).




2. Next, remove the two self locking nuts and flat washers from the bracket under the seat by using a 17mm wrench (*Figure 2*).



3. Remove four Allen bolts in the middle of the baseplate, using a 3mm Allen wrench (*Figure 3*).

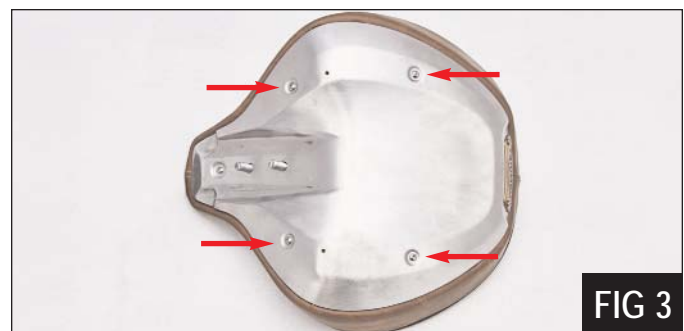

4. Remove the other three bolts on the base plate, using a T15 torx wrench (*Figure 4*).

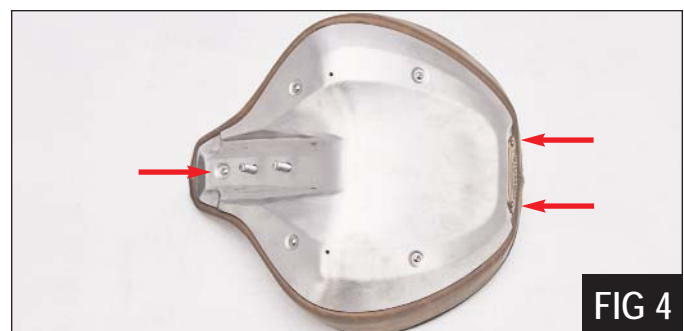

5. Remove the baseplate from the stock seat and transfer it onto the Corbin seat and secure with the provided Allen bolts, using a 3/32 Allen wrench.

6. Re-install the mounting bracket and secure with the stock self locking nuts and washers.

7. Install the Corbin seat onto the chassis by securing it with the stock torx bolts.

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com